



Pre-Filter Check

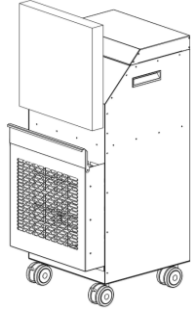

Open compartment lid.
Pull out pre-filter.

HEPA Filter Check

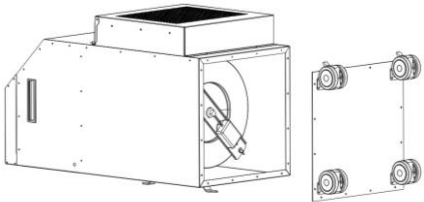

Remove bottom plate.
Check wing nuts and HEPA filter.

Distributed by:

TRI-DIM FILTER CORPORATION
93 Industrial Drive
Louisa, VA 23093
www.tridim.com
1-800-458-9835




SCAN ME

p/n: 2007-0566-S01



TRI-KLEEN 500UV

Quick Start Guide

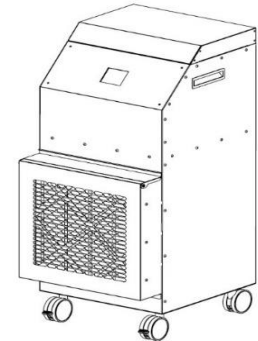

1. Before plugging device in

- Check that both HEPA filter and MERV8 pre-filter are **Installed And Undamaged**.
- **Inspect And Tighten** both HEPA filter retaining wing nuts that may have loosened during transportation.


2. Start Screen

- Once TRI-KLEEN 500UV is plugged in, the touchscreen will automatically turn on.
- The **Start Screen** will appear.




3. Default PIN

- Touch anywhere on the screen to bring up the **PIN Entry Screen**.
- Type in the default PIN: **0000**.

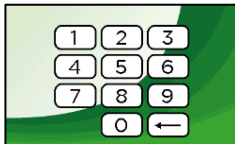

4. Main Menu

- Select **Fan Speed** using arrows.
- Check **Filter Health** and **Time To Service**.
- Turn **UV Lamp** on/off.
- **Lock** the screen.
- Change **System Settings**.

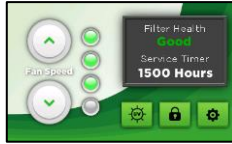

5. System Settings Menu

- **Filter Info** with usage percentage.
- **Calibrate** TRI-KLEEN 500UV after HEPA filter change.
- Choose to **Change PIN**.
- **Disable PIN** and lock screen.
- Contact options for **Support**.



5.1 Filter Info

- Check **HEPA Filter Usage** since last filter change.
- Turn on/off **Audio Alerts** (device beeps if HEPA filter needs to be changed).



- When HEPA filter change is due, **Service Filter Alert** on start screen appears.



5.2 Support

- Refer to **User Manual** for detailed information on TRI-KLEEN 500UV.
- Scan **QR Code** on backside of this Quick Start Guide.
- Call **Customer Service**.

